

# USER MANUAL



\*GA0112183e5e\*

• **Alpha-Numeric Display Pager** •

**MODEL: AL315 / AL801**

**CONTENTS**

 
Control Buttons.....	1
Features and Functions.....	2-3
LCD Display .....	4
Function Operation.....	5-20
Reading a Message .....	5
Locking Message .....	6
Unlocking Message .....	7
Deleting .....	8
Deleting All .....	9
Moving to memo .....	10
Setting Alert .....	11
Pager Off .....	12
Setting Alarm .....	13
Setting Time And Date .....	14
Setting Scroll .....	15
Reading The Mail Drop.....	16
Setting Auto Sleep .....	17
Reading The Personal Message .	18
Reading The Overflow Message .....	19
Backlighting / Duplicate .....	20

### Backlighting


You can manually activate the backlight at any time by pressing and holding for three seconds . If no other buttons are pressed, the backlight automatically turns off when the pager returns to the standby mode .

### Duplicate Message

The pager automatically covers by the latest messages if it is received the same message.

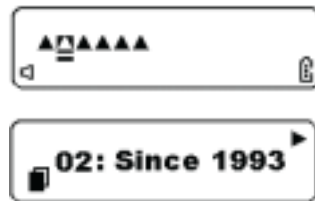

### Control Buttons

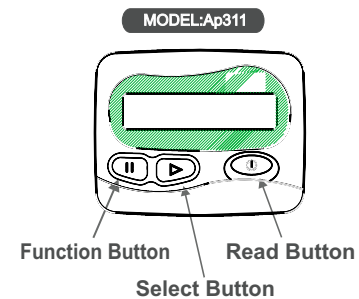 

- ⌚ Read Button**
- to read message
  - to turn on back-light
  - to turn on power
  - to activate the function

- ▶ Select Button**
- to move the cursor
  - to read message by cycles



- || Function Button**
- to display the function menu
  - to adjust the time and date change
  - to enable the function mode

## 2.Features and Functions

  - ∨ One line, 14 Characters Display
- ∨ Display Back Light
- ∨ 10 Memory Slots + Overflow Message 10 sets
- ∨ Personal Message Memory : 10 sets
- ∨ Mail Drop : 5 groups; total 25 sets
- ∨ Time .Month. Date. Display
- ∨ User Selectable 12 / 24 Hour Clock
- ∨ Message Time Stamping
- ∨ Error Message Indication
- ∨ Manual On / Off operation
- ∨ Unread Message Indicator
- ∨ Duplicate Message Indicator
- ∨ Locks Important Messages
- ∨ Individual Or All Message Delete


## Reading Overflow Message

- \* Press **▶**, to move the flashing icon to the **⏏** symbol.
- \* Press **⏏**, to read message.
- \* When the **⏏** symbol is shown in the top left-hand corner of the display, indicates the message status as a overflow message.




### Reading Personal Message

 - \* Press **▶** , to move the flashing icon to the **☒** symbol.
- \* Press **⏪** , to read message.
- \* When the **☒** symbol is shown in the top left-hand corner of the display , indicates the message status as a personal message.



- ∨ Reminder Alerts
- ∨ Message Overflow Indication
- ∨ Message Full Auto Storage
- ∨ Message Auto Storage to Mail Drop ( User selectable )
- ∨ Display Out Of Service Area
- ∨ Display 5 Daily Alarms Sets
- ∨ 4 Beep Alerts / Silent Vibration / 8 Musical / Sleep Mode
- ∨ Mail Drop Alerts
- ∨ Remain In Memory While Re-place Battery

### LCD Display

 

#### Pager Status Symbols

- MUSIC ALERT / BEEP ALERT
- SILENT VIBRATION
- ALARM
- AUTO SCROLL
- OUT OF RANGE
- BATTERY CAPACITY
- MESSAGE OVERFLOW
- AUTO SLEEP STAND BY
- AUTO SLEEP ACTIVE
- UNREAD MESSAGE

#### Message Status Symbols

- MESSAGE IN MEMORY
- MESSAGE SELECTING
- DUPLICATE MESSAGE IN MEMORY
- DUPLICATE MESSAGE SELECTING
- MESSAGE LOCK IN MEMORY
- MESSAGE LOCK SELECTING
- PERSONAL MESSAGE
- PERSONAL MESSAGE SELECTING
- OVERFLOW MESSAGE
- OVERFLOW MESSAGE SELECTING
- ERROR MESSAGE
- DUPLICATE MESSAGE
- NEXT PAGES

#### Mail Drop Symbols

- MESSAGE IN MAILDROP
- MAILDROP SELECTING
- MAIL MESSAGE IN MEMORY
- MAIL MESSAGE SELECTING
- MAIL GROUP INDICATE

 
### Setting Auto Sleep

- \* Press **||**, then , press **▶** once until "AUTO SLEEP SET " Mode is displayed.
- \* Press **||**, to enable set auto sleep .
- \* Press **▶**, to move the cursor to the digits. Then press **||** to adjust each set of digits : auto sleep on or off, on time and off time.
- \* Press **⏻** to activate the changes.



### Reading Mail Drop

- \* .Press **▶** , to move the flashing icon to the icon **☐** .
  - \* .Press **⏻** , to read message.
  - \* .Press **▶** , to move the icon to the desired message.
  - \* .Press **⏻** , to read message .
- ★ **The features allows 5 Group of Mail Drop. Each group has 5 sets, Total 25 sets.**



### Receiving And Reading Your Message

- \* A **☐** symbol indicates you have a message has not been read
- \* A flashing **▲** symbol indicates you have a message has not been read Press **▶** , to select the message you want to read. The symbol **☐** indicates the location of the message. .
- \* Press **⏻** , to display your message.
- \* Press **⏻** once, to view the next screen.
- \* Press **▶** once, to view the next message.



- ★ **If you have sat " Auto Scroll " , your pager will scroll through your message , screen by screen automatically .**

 
### Locking Messages

- \* Press **▶** , to move the cursor to the desired symbol **🔒** .
- \* Press **⏏** , press **▶** once to select the desired "MESSAGE LOCK".
- \* Press **⏏** , to lock the message. .
- \* The symbol **🔒** is displayed , indicating the status of the message in memory.



### Setting Scroll

- \* Press **⏏** , then , press **▶** , to " SET SCROLL " Mode .
- \* Press **⏏** , to enable scroll automatically.
- \* When "SET SCROLL " displays SPEED : X ( manual scroll ) , **—** ( slow ) , **— —** ( medium ) , **— — —** ( fast ).
- \* Press **⏏** , receive the confirmation of the request .
- \* Press **▶** to activate the function.. .

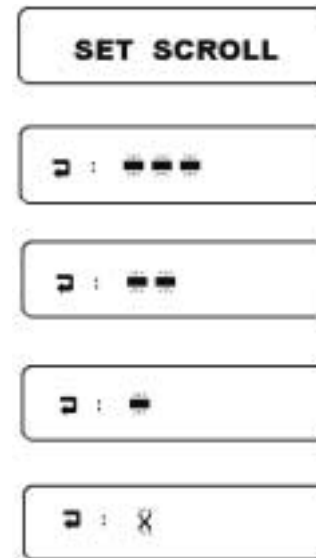



### Setting The Time And Date


- \* Press **||** , then , press **▶** once until "SET TIME " Mode is displayed.
- \* Press **||** , to enable set time. .
- \* Press **▶** , to move the cursor to the hour / minute digit. Then press **||** to adjust each set of digits : AM/ PM/24 hr / month / day.
- \* Press **⏵** to activate the time and date change.

SET TIME

12:35AM 4/15

12:35 **■** 4/15

### Unlocking Messages

- \* Press **▶** , to move the cursor to  to select the message to unlock.
- \* Press **||** , then , press **▶** once, to " MESSAGE UNLOCK " Mode.
- \* Press **||** , to unlock the message.

MESSAGE UNLOCK

 
### Deleting Messages

- \* Press **▶** , to move the cursor to select the message you desire.
- \* Press **||** , press **▶** once , to display " MESSAGE DELETE "
- \* When " DELETE ? " is displayed on the screen , press **▶** to delete the message.



### Setting The Alarm ( 5 alarms )

- \* Press **||** , then , press **▶** to "SET ALARM "Mode.
- \* Press **||** , to enable or disable the alarm.
- \* Press **▶** , to move the cursor to set the alarm status either alarm enabled , alarm disabled or set time.
- \* Press **⏵** setting the alarm is completed.

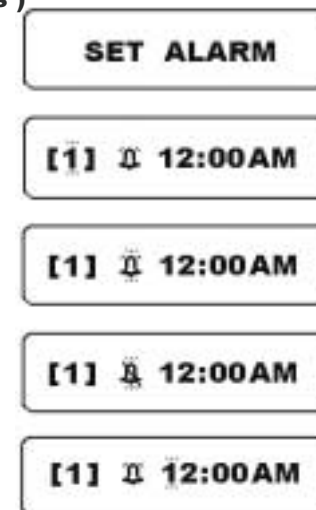

**Turning Your Pager Off**


- \* Press **||** , then , press **▶** again to " PAGER OFF " mode.
- \* Press **||** , till " PAGER OFF ? " appears on the screen.
- \* Press **▶** , to turn the pager off .
- \* After turning your pager off , the screen is empty.
- \* Press **Ⓛ** , to turn the pager power on.

 
**PAGER OFF****PAGER OFF ?****Deleting All Messages**  
( All unlocked and read messages )

- \* Press **||** , press **▶** again , to " DELETE ALL " Mode .
- \* When " DELETE ALL ? " is displayed , Press **▶** ,all unlocked and read messages are now deleted.

**DELETE ALL****DELETE ?**

### Moving Message To Memo

- \* Press **▶** , to move the cursor to the desired storing message.
- \* Press **||** , and press **▶** once, to move to " MOVE TO MEMO "
- \* Press **||** , to move the  icon message automatically into your personal mail .

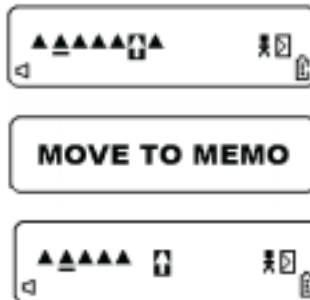

### Setting The Alert

- \* Press **||** , then , press **▶** once to display " SET ALERT " Mode .
- \* Press **▶** , to move the cursor to select the desired alert mode .( Alert / Musical / Vibration / Sleep are optional)
- \* Press **||** , to enable or disable the alert . (If disable then go back to last step)
- \* Press **▶** , to move to the cursor to the desired tone, music, vibrate, or vibrate then tone .
- \* Press **⏻** setting the alert is completed.

